



Operating Manual

Centrifuge

1-15P

from serial no. 119856

Please retain for later use!

In case of inquiries please state the following number:

Serial number:

© Copyright by
Sigma Laborzentrifugen GmbH
An der Unteren Söse 50
37520 Osterode am Harz
Germany

Phone +49 (0) 55 22 / 50 07-0
Fax +49 (0) 55 22 / 50 07-12
E-mail: info@sigma-zentrifugen.de

For service

please use our **service request** form on our website:
www.sigma-zentrifugen.de → [Service Area]

or contact:
Phone +49 (0) 55 22 / 50 07-84 25
Fax +49 (0) 55 22 / 50 07-94 25
E-mail: service@sigma-zentrifugen.de

EC – DECLARATION OF CONFORMITY

The product named hereinafter was developed, designed, and manufactured in compliance with the relevant, fundamental safety and health requirements of the listed EC directives and norms. In the event of modifications that were not authorised by us or if the product is used in a manner that is not in line with the intended purpose, this declaration will be rendered void.

Product name: Laboratory Centrifuge

Product type: Sigma 1-15P

Order number: 10051, 10050

Directives: 2006/42/EG Machinery Directive
2006/95/EG Low Voltage Directive
2004/108/EG EMC Directive

Normes: EN 61010-2-020:2006
EN 61000-3-2:2006, A1:2009, A2 :2009
EN 61000-3-3:2008
EN 61326-1:2006

Sigma Laborzentrifugen GmbH

An der Unteren Söse 50
37520 Osterode
Germany

Authorised Representative for the
documentation:
Eckhard Tödteberg

Osterode, 01.09.2011

Michael Sender
General Manager

Table of Contents

1	General Information	11
1.1	Importance of the Operating Manual	11
1.2	Intended Use	11
1.3	Technical Data	12
1.3.1	Ambient Temperature	12
1.4	Scope of Supply	13
1.5	Standards and Regulations	13
2	Safety Instructions and Hazard Warnings	14
2.1	Symbols used in the Safety Instructions	14
2.2	Symbols used in the Operating Manual	15
2.3	Informal Notes on Safety	15
2.4	Safety Instructions for Centrifugation	16
2.4.1	Special Instructions	16
2.4.2	Resistance of Plastics	17
2.5	Prohibited Centrifuging Operations and Hazard Warnings	17
2.5.1	Special Hazards	18
2.6	Checks by the Operator	19
2.7	Instructions for Emergency Situations	19
2.8	Remaining Hazards	19
3	Transport and Storage	20
3.1	Dimensions and Weight	20
3.2	Notes on Transport	20
3.3	Notes on Storage	20
4	Set-up and Connection	21
4.1	Unpacking the Centrifuge	21
4.1.1	Transport Safety Device	21
4.2	Installation	22
4.2.1	Installation Site	22
4.2.2	Connection	22
4.2.3	Fuses	22

5	Using the Centrifuge	23
5.1	Description	23
5.1.1	Operating Elements	23
5.1.1.1	Operating Panel	24
5.1.1.2	Name Plate	24
5.1.2	Construction and Constructive Safety Measures	25
5.1.3	Drive	25
5.1.4	Operation and Display	25
5.1.5	Electronic System	25
5.1.6	Safety Devices	26
5.1.6.1	Lid Lock and Lid Closing Device	26
5.1.6.2	Standstill Monitoring	26
5.1.6.3	System Check	26
5.1.6.4	Ground Wire Check	26
5.2	Initial Start-Up	27
5.2.1	Switching the Centrifuge ON	27
5.2.2	Opening and Closing the Lid	27
5.2.3	Installation of Rotors	28
5.2.3.1	Installation of Angle Rotors with a Hermetically Sealed Lid	29
5.2.3.2	Installation of the Microhematocrite Rotor	30
5.2.4	Installation of Accessories	31
5.2.4.1	Tubes	31
5.2.5	Service Life of Rotors and Accessories	32
5.2.6	Starting the Centrifuge	33
5.2.7	Interrupting a Centrifugation Run	33
5.2.7.1	Interrupting a Deceleration Process	33
5.2.7.2	Softstart and Softstop Function	33
5.3	Display/Program Options	34
5.3.1	Time	34
5.3.1.1	Changing the Time Increments	35
5.3.1.2	Short Run	35
5.3.1.3	Continuous Run	35
5.3.2	Speed	36
5.3.2.1	Changing the Speed Increments	36
5.3.3	Relative Centrifugal Force (RCF)	37
5.3.4	Rotor	37

5.3.5	Program	38
5.3.5.1	Saving the Current Settings	38
5.3.5.2	Calling Up Stored Programs	38
5.3.6	Lockdown	39
5.3.6.1	Permanent Lockdown	39
5.3.7	Activating/Deactivating the Automatic Lid Opening Function	39
5.3.8	Activating/Deactivating the Sound Signal	40
6	Malfunctions and Error Correction	41
6.1	Error Mode	41
6.2	Error Correction	41
6.2.1	No Indication on the Display	41
6.2.2	Centrifuge cannot be started	41
6.2.3	Centrifuge decelerates during Operation	41
6.2.4	Lid cannot be opened	42
6.2.5	Emergency Lid Release	42
6.2.6	Error Codes	43
6.2.7	Service Contact	44
7	Care and Maintenance	45
7.1	Cleaning and Care	45
7.1.1	Centrifuge	45
7.1.2	Accessories	46
7.1.2.1	Plastic Accessories	46
7.1.2.2	Aluminum Accessories	46
7.1.3	Rotors	47
7.1.3.1	Microhematocrite Rotor	47
7.1.4	Glass Breakage	48
7.2	Sterilization and Disinfection of the Rotor Chamber and Accessories	48
7.2.1	Autoclaving	49
7.3	Service	50
7.4	Return of defective parts	51
8	Disposal	52
8.1	Disposal of the Centrifuge	52
8.2	Disposal of the Packaging	52
9	Warranty and Liability	52

10	Suitable Accessories	53
10.1	Maximum speed for tubes	54
10.2	Graphical Representation of the Rotors	54
11	Appendix	55
11.1	Formulae – Mathematical Relations	55
11.1.1	Relative Centrifugal Force (RCF)	55
11.1.2	Density	55
11.1.3	Speed-Gravitational-Field-Diagram	55
11.2	Table of rotors and accessories with a different service life	57
11.3	Resistance Data	58
12	Index	61

1 General Information

1.1 Importance of the Operating Manual

- A fundamental requirement for the safe and trouble-free operation of the centrifuge is to be familiar with the fundamental safety instructions and all possible hazards.
- The operating manual includes important information concerning the safe operation of the centrifuge.
- This operating manual and in particular the notes on safety and hazards must be observed by all persons operating the centrifuge.
- In addition, the local rules and regulations for the prevention of accidents must be complied with.

1.2 Intended Use

Centrifuges are power-driven machines that separate liquids from solid matter, liquid mixtures, or solid mixtures by centrifugal force (see BGR 500, chapter 2.11, part 3). They are solely intended for this purpose. Any other use beyond this area of application is regarded as improper use. SIGMA Laborzentrifugen GmbH cannot be held liable for any damage resulting from such improper use.

The intended use also includes

- observation of all the notes and instructions included in the operating manual and
- compliance with the care, cleaning, and maintenance instructions.

1.3 Technical Data

Manufacturer:	S I G M A Laborzentrifugen GmbH An der Unteren Söse 50 37520 Osterode
Type:	1-15P
Electr. connection: Protection class: IP-Code	see name plate I 20
Connected load (kVA): Power consumption (kW): Max. current consumption (A):	0.39 0.24 1.7 (at 220-240 V / 50-60 Hz) 3.4 (at 100-120 V / 50-60 Hz)
<u>Performance data:</u> Max. speed (rpm): Max. capacity (ml): Max. gravitational field (x g): Max. kin. energy (Nm):	14 000 53 17 968 1 490
<u>Other parameters:</u> Time range: Storage locations:	10 sec - 11 h 59 min; short run, continuous run 10
<u>Physical data:</u> Depth (mm): Width (mm): Height (mm): Weight (kg): EMC as per EN 61326: Noise level (dBA):	320 240 245 13 Class B < 58

Fig. 1.1: Technical Data

1.3.1 Ambient Temperature

The figures are valid for an ambient temperature of $+23^{\circ}\text{C} \pm 2^{\circ}\text{C}$ and a nominal voltage $\pm 10\%$.*

Allowable ambient temperature $+5^{\circ}\text{C}$ to $+40^{\circ}\text{C}$.

Max. relative humidity of air 80% up to 31°C with a linear decrease to 50% relative humidity of air at 40°C .

Lowest storage and transport temperature -20°C (see chapter 3 "Transport and Storage").

* At a nominal voltage of 100V or 200V, a tolerance of $+10\%$ / -5% applies.

1.4 Scope of Supply

The centrifuge comprises:

- 1 connecting cable depending on the voltage variant
- 1 rotor wrench Part no. 930 050
- 20 ml slushing oil Part no. 70 104
- Spare fuses Part no. 70149 for 220-240 V
Part no. 70102 for 100-120 V

Documentation:

Operating manual incl. EU Declaration of Conformity (page 5)

Accessories

according to your order, our order confirmation, and our delivery note.

1.5 Standards and Regulations

Please refer to the enclosed EU Declaration of Conformity (page 5).

2 Safety Instructions and Hazard Warnings

2.1 Symbols used in the Safety Instructions

International symbols used for SIGMA centrifuges:






 





Symbol	Title
	Gefährliche elektrische Spannung Dangerous voltage Courant haute tension
	Achtung, Bedienungsanleitung lesen Attention, consult instruction manual Attention, consulter mode d'emploi
	Ein (Netzverbindung) On (Power) Marche (mise sous tension)
	Aus (Netzverbindung) Off (Power) Arrêt (mise hors tension)
	Schutzleiteranschluss Protective earth (ground) Liaison à la terre
	Erde Earth (ground) Terre
	Netzstecker ziehen Unplug mains plug Tirer la fiche de prise
	Vorsicht Quetschgefahr Caution! Risk of bruising Attention! Danger de blessure
	Drehrichtungspfeil Arrow direction of rotation Flèche sens de rotation
	Heiße Oberfläche Hot surface Surface chaude
	Nicht mit dem Hausmüll entsorgen Do not dispose as part of domestic waste Ne pas jeter avec les déchets ménager

Fig. 2.1: Symbols used for SIGMA centrifuges

2.2 Symbols used in the Operating Manual

Symbols used in the Operating Manual:




Symbol	Title
	Gefährliche elektrische Spannung Dangerous voltage Courant haute tension
	Achtung, mögliche gefährliche Situation Attention, potentially dangerous situation Attention, situation potentiellement dangereuse
 Attention!	Hinweis auf wichtige Sachverhalte Note concerning important facts Information très importante

Fig. 2.2: Symbols used in the Operating Manual

2.3 Informal Notes on Safety

The operating manual is an integral part of the product.

- Please retain the operating manual throughout the service life of the centrifuge.
- Please hand the operating manual over to any subsequent owner or user of the centrifuge.
- Please add any amendments that you receive to the manual.
- Please make the operating manual readily available at the exact location of the centrifuge at all times.
- The operating personnel must have read and understood the operating manual prior to operation.
- Please also comply with the general and company-specific rules and regulations for the prevention of accidents.

2.4 Safety Instructions for Centrifugation

- Ensure that the centrifuge was set up properly (see section 4.2 "Installation", page 22).
- Check the centrifuge, rotor, and accessories for external signs of damage prior to start-up.
- Do not use the centrifuge with rotors and accessories that have not been approved by the manufacturer. In case of doubt contact our service team (See 6.2.7 "Service Contact", page 44).
- Ensure that the rotor is correctly fitted (see 5.2.3 "Installation of Rotors", page 28).
- The load of the rotor as defined by the manufacturer and the maximum speed must not be exceeded (see the engraving on the rotor or bucket).
- The rotor must be loaded symmetrically at equal weights.
- Please follow the instructions concerning the installation of accessories (see 5.2.4 "Installation of Accessories", page 31).



Attention!

- Please consider the maximum permissible gravitational field of 12,000 x g when using the microhematocrite rotor ! An excess gravitational field will result in an increased risk of glass breakage!

2.4.1 Special Instructions

- If liquids with a density $> 1.2 \text{ g/cm}^3$ are used, reduce the speed (see 11.1.2 "Density", page 55).
- Protective clothing is not required for the operation of the centrifuge. The materials to be centrifuged may, however, require special safety measures (e.g. centrifugation of infectious, toxic, radioactive, or pathogenic substances).
- Spin infectious material in sealed rotors only.
- Avoid the corrosion of the centrifuge and its accessories by careful maintenance (see chapter 7 "Care and Maintenance", page 44 ff).
- When not using the centrifuge, open the lid so that all liquids can evaporate.
- Stop the centrifuge immediately in the event of a malfunction. Eliminate the problem (see 6.2, page 41) or inform the SIGMA Laborzentrifugen GmbH service team (see 6.2.7 "Service Contact", page 44).

2.4.2 Resistance of Plastics



Chemical influences have a strong effect on the polymeric chains of plastics, and therefore, on their physical properties. Plastic parts can be damaged if solvents, acids, or alkaline solutions are used.

- **Please refer to the resistance table (see 11.2, page 57)!**

2.5 Prohibited Centrifuging Operations and Hazard Warnings

Under the rules stipulated by the German trade association BGR 500, chapter 2.11, part 3, the operator is obliged to:

- take measures in order to prevent all danger to life or health during work.
- ensure that centrifuges are operated properly and entirely as intended (see chapter 1.2 "Intended Use", page 11 of this Operating Manual).
- take measures for the safe opening of centrifuges.



Please comply with the following hazard warnings. In the case of non-compliance with the instructions, the manufacturer cannot be held liable or subject to any warranty claims.

- Only persons who have read and understood the operating manual in whole are authorized to operate the centrifuge (see 2.3 "Informal Notes on Safety", page 15).
- Keep informed about local fire prevention regulations and measures to contain harmful emissions (depending on the substances to be centrifuged).
- Do not use the centrifuge if it was installed incorrectly.
- Do not use the centrifuge without panels.
- Do not hit or move the centrifuge during its operation.
- Do not lean against or rest on the centrifuge during its operation.
- Maintain a safety distance of at least 30 cm around the centrifuge.
- Do not store any dangerous goods in the centrifuge area.
- Only use the centrifuge with rotors and accessories that have been approved by the manufacturer. We explicitly warn against the use of equipment of poor quality. Breaking glass or bursting vessels can cause dangerous imbalances at high speeds.

- Do not spin any substances that could damage the material of the rotors and buckets of the centrifuge in any way. Highly corrosive substances, for example, damage the material and affect the mechanical strength of the rotors and inserts.
- Infectious, toxic, pathogenic, and radioactive substances must be centrifuged in certified rotors and vessels. **Take suitable precautions for your own safety if there is a risk of toxic, radioactive, or pathogenic contamination.**
- **Please comply with the special precautions for taking care of the centrifuges and accessories. These are measures for maintaining operational safety!** (see chapter 7 "Care and Maintenance", page 44 ff).



Attention!

- Ensure that all repairs are performed only by authorized and specialized personnel (see 6.2.7 "Service Contact", page 44).

2.5.1 Special Hazards



- Do not open the lid when the rotor is in motion!
- Do not reach into the rotor chamber when the rotor is in motion!
- Do not hold your fingers between the lid and the housing when closing the lid. Risk of crushing!
- Do not use the centrifuge if the rotor is overloaded. (see 2.4 " Safety Instructions for Centrifugation", page 16).
- Do not use the centrifuge if the rotors and inserts show signs of corrosion or other defects.
- Do not use the centrifuge if the rotor is loaded asymmetrically.
- Do not use the centrifuge with tubes that are excessively long.
- Do not use the centrifuge within hazardous locations.
- Do not spin explosive or inflammable substances.
- Materials that chemically react with each other with a high level of energy are prohibited.

2.6 Checks by the Operator

Check all of the safety-relevant parts of the centrifuge at least once per month for any visible signs of damage (e.g. cracks, corrosion). This applies particularly to the following:

- Concentricity of the motor shaft:
 - Visual inspection: Slowly rotate the rotor by hand without the rotor tie-down screw. If the motor shaft does not turn around on a perpendicular axis, the motor and motor shaft must be replaced.
 - Refit the rotor correctly after visual inspection (see 5.2.3 "Installation of Rotors", page 28).
 - Auditory inspection: Check the unit for atypical running noises.
- Rubber parts:
 - Special attention must be paid to all of the rubber parts (e.g. motor cover, lid seal, adapter) in terms of visible structural changes. Defective parts must be replaced immediately.
- Screw connections
- Rotors and accessories. (see 5.2.5 "Service Life of Rotors an Accessories", page 32).

2.7 Instructions for Emergency Situations

- If an emergency arises, switch off the centrifuge immediately!
- If in doubt, call the emergency doctor!

Fire-fighting measures or measures for the containment of harmful emissions depend on the local conditions and on the substances processed in the centrifuge. Please be informed about the rules and regulations that are applicable on-site.

2.8 Remaining Hazards

The centrifuge was built state-of-the-art and according to the accepted safety rules. Danger to life and limb of the user or of third parties, or impairments of the unit or other material assets cannot be completely excluded when the centrifuge is used.

- Use the centrifuge only for the purpose that it was originally intended for (see 1.2, page 11).
- Use the centrifuge only if it is in a perfect running state.
- Immediately eliminate any problems that can affect safety.

3 Transport and Storage

3.1 Dimensions and Weight

Depth:	320 mm
Width:	240 mm
Height:	245 mm
Weight:	13 kg

Fig.3.1: Dimensions and weight

3.2 Notes on Transport

- When lifting or carrying the centrifuge, always reach under the centrifuge from the side.
- Transport the centrifuge within suitable packaging, and if at all possible, in its original packaging.

3.3 Notes on Storage

The centrifuge can be stored for up to a year without any problems.

- Store the centrifuge only in dry rooms.
- The storage temperature must be above -20°C .
- If you would like to store it for more than one year, or if you intend to ship it overseas, please contact the manufacturer.

4 Set-up and Connection

4.1 Unpacking the Centrifuge

- Open the cardboard box.
- Take out the box containing the accessories.
- Remove the upper foam cushion.
- Lift the centrifuge upwards out of the cardboard box. When lifting or carrying the centrifuge, always reach under the centrifuge from the side.



Attention!

The centrifuge weighs approx. 13 kg!

Please retain the packaging for any possible future transport of the centrifuge.

4.1.1 Transport Safety Device

The SIGMA 1-15P centrifuge is not equipped with a transport safety device.

4.2 Installation

4.2.1 Installation Site

All the energy supplied to the centrifuge is converted into heat and emitted to ambient air.

- Ensure sufficient ventilation.
- Keep a safety distance of at least 30 cm around the centrifuge so that the vents in the centrifuge remain fully effective.
- Do not position the centrifuge near heat generators.
- Avoid direct sunlight (UV radiation).
- The table must be stable and have a solid, even surface.



Attention!

During transport from cold to warmer places, condensation will collect inside the centrifuge. It is important to allow sufficient time for drying before the centrifuge can be used again.

4.2.2 Connection



The operating voltage on the name plate must correspond to the local supply voltage!

This SIGMA laboratory centrifuge is a unit of safety class I and has a three-wire power cord with a IEC C13 connector.

On the back, next to the mains power input, there is an additional ground wire connector (see Fig. 5.2, page 23) where a separate ground wire can be connected. This ensures that the admissible leakage current cannot shock anyone if a problem with the protective ground wire system were to occur. Only authorized and specialized personnel are permitted to connect the unit. Please contact the head of our service team (see 6.2.7 "Service Contact", page 44).

4.2.3 Fuses

Typically, the centrifuges must be protected on site with 16 A fuses of class "B" or "L".

5 Using the Centrifuge

5.1 Description

5.1.1 Operating Elements

- 1 Mains power switch
- 2 Stop key
- 3 Lid key
- 4 Lid
- 5 Display
- 6 Start key
- 7 Left rotary knob
- 8 Right rotary knob

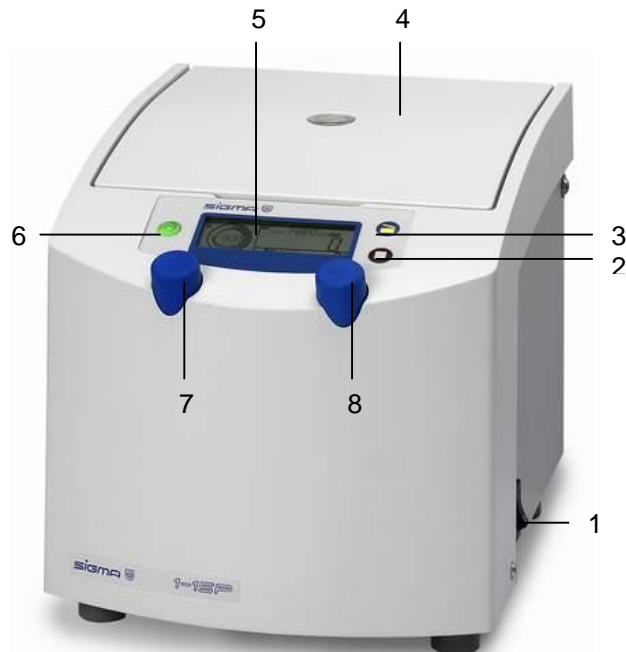


Fig. 5.1: Total view of the centrifuge

- 9 Name plate
- 10 Equipotential bonding screw
- 11 Mains power



Fig. 5.2: Rear view of the centrifuge

5.1.1.1 Operating Panel



Fig 5.3: Operating Panel

The centrifuge is started directly via the operating panel. When the centrifuge is switched on, all of the operating keys and displays will be illuminated for a short time. It is now ready for operation.

5.1.1.2 Name Plate

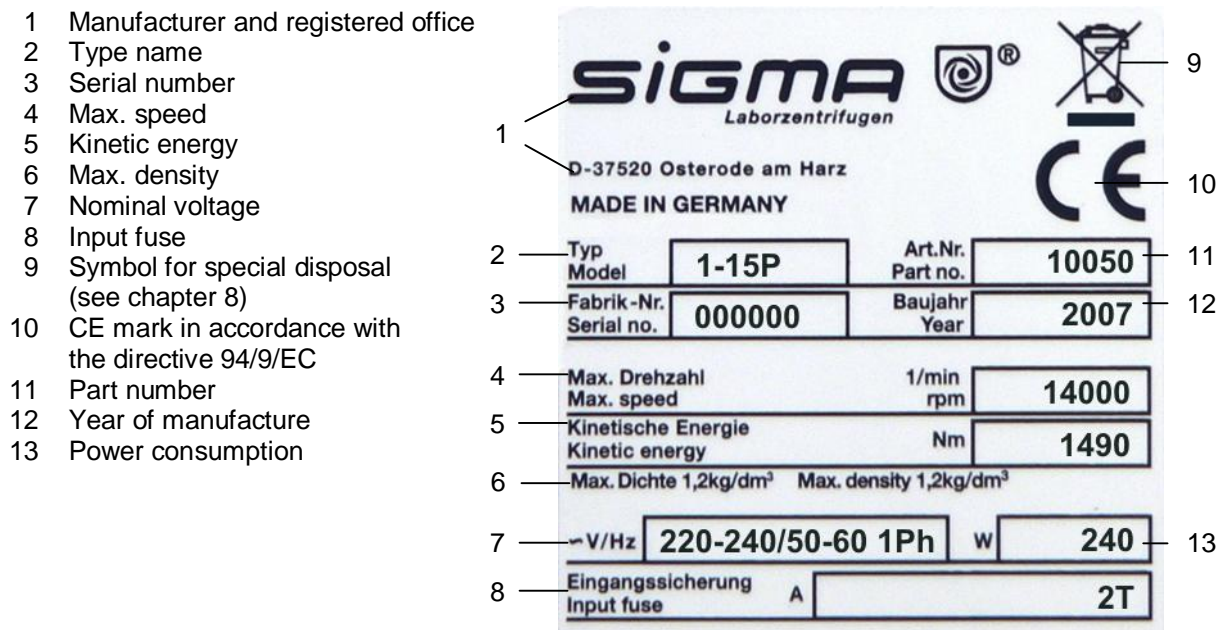


Fig. 5.4: Example of a name plate

5.1.2 Construction and Constructive Safety Measures

The centrifuge is installed within a solid construction. On the back, the lid is secured by solid hinges and on the front by two separate lid locks.

5.1.3 Drive

The drive motor is a well-dimensioned, collector-less asynchronous motor.

5.1.4 Operation and Display

The display is a hermetically sealed LCD display. It is operated by way of two rotary knobs and indicates the operating statuses.

5.1.5 Electronic System

The microprocessor-controlled electronic system ensures a wide range of adaptations of the centrifuge for various tasks. The following parameters can be set:

- Speed in steps of 100 or 10 rpm
- Relative centrifugal force RCF in steps of 10 x g
- Time between 10 sec and 11h 59min max.
- Continuous run
- Short run
- Acceleration and deceleration curves
- Storage and call-up of programs

5.1.6 Safety Devices

Apart from the mentioned passive safety devices due to the solid design, the following active precautions are in place for your safety:

5.1.6.1 Lid Lock and Lid Closing Device

The centrifuge can only be started when the lid is properly closed. The electrical locks must be locked. The lid can only be opened when the rotor has stopped. If the lid is opened by way of the emergency release system during operation, the centrifuge will immediately switch off and decelerate brakeless. If the lid is open, the drive is completely separated from the mains power supply, i.e. the centrifuge cannot be started (see 6.2.5 "Emergency Lid Release", page 42).

5.1.6.2 Standstill Monitoring

Opening of the centrifuge lid is only possible if the rotor is at a standstill. This standstill is checked by the microprocessor.

5.1.6.3 System Check

An internal system check monitors the data transfer and sensor signals with regard to plausibility. Errors are detected with extreme sensitivity and displayed as error messages with a number on the speed display (see 6.2.6 "Error Codes", page 43).

5.1.6.4 Ground Wire Check

For the ground wire check, there is an equipotential bonding screw on the rear panel of the centrifuge (see 4.2.2 "Connection", page 22). A ground wire check can be carried out by authorized and specialized personnel using a suitable measuring instrument. Please contact the head of our service team (see 6.2.7 "Service Contact", page 44).

5.2 Initial Start-Up



Before the initial start-up, please ensure that your centrifuge is properly set up and installed (see 4.2 "Installation", page 22).

5.2.1 Switching the Centrifuge ON

- Press the mains power switch on the right side of the front (see Fig. 5.1, page 23).

The centrifuge display then illuminates.

5.2.2 Opening and Closing the Lid

The lid can be opened if the centrifuge is at a standstill and if the lid key is illuminated.

- Press the lid key in order to open the lid (see 5.3.7 "Activating/Deactivating the Automatic Lid Opening Function", page 39).

The centrifuge cannot be started if the lid is opened.

- To close the lid, press with both hands on the left and right side of the lid to ensure that both of the lid locks lock into place.



Do not hold your fingers between the lid and the housing when closing the lid. Risk of crushing!



Attention!

A flashing lid key indicates that only one lid lock has locked.

5.2.3 Installation of Rotors

- Open the centrifuge lid by pressing the lid key.
- Loosen the rotor tie-down screw from the motor shaft (anti-clockwise). It is not necessary to unscrew the rotor tie-down screw completely because it fits into the central bore of the rotor.
- Lower the rotor with its central bore straight down onto the motor shaft.
- Tighten the rotor tie-down screw clockwise with the supplied rotor wrench with 5 Nm. In doing so, hold the rotor at its outer rim.
- After frequent use, the rotor tie-down screw must be loosened by some turns and fastened again. This must be done once a day or after 20 cycles. This ensures a proper connection between the rotor and the motor shaft.
- The rotor tie-down screw should only be tightened when a rotor is installed in order to prevent the collet chuck from being expanded.



- 1 Angle rotor
- 2 Rotor-tie down screw
- 3 Motor shaft

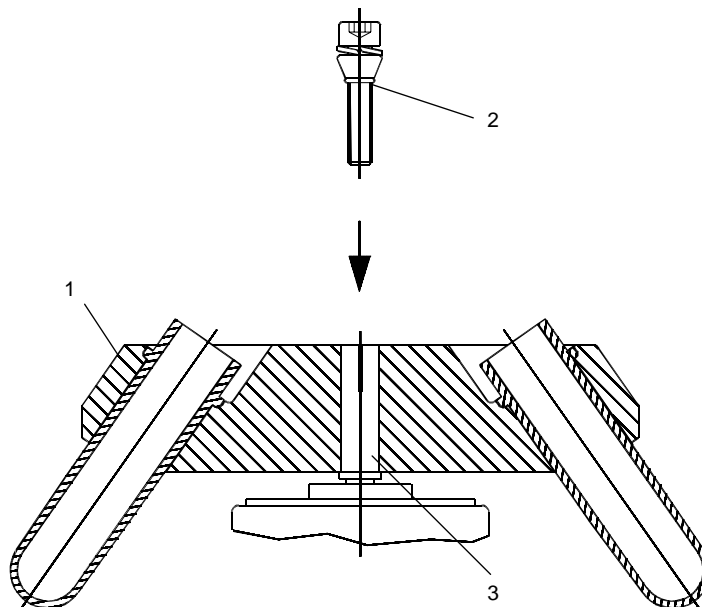


Fig. 5.5: Installation of a rotor

5.2.3.1 Installation of Angle Rotors with a Hermetically Sealed Lid

- Screw the rotor cover onto the rotor and tighten it.
- Insert the rotor tie-down screw into the motor shaft and tighten it slightly.
- Lower the rotor with the cover onto the motor shaft with inserted rotor tie-down screw.
- Tighten the rotor tie-down screw at 5 Nm using the supplied rotor wrench.
- The rotor can also be used without a cover.
- Slightly grease the rotor and lid seals after cleaning.
- The rotors can be installed or removed with a closed lid after loosening the rotor tie-down screw.



Attention!

- **Please follow the safety instructions and hazard warnings in chapter 2, page 14 ff!**

5.2.3.2 Installation of the Microhematocrite Rotor

- Lower the microhematocrite rotor with its central bore straight down onto the motor shaft.
- Tighten the rotor tie-down screw clockwise with the supplied rotor wrench. In doing so, hold the microhematocrite rotor with your left hand and tilt it slightly, if necessary, in order to prevent the motor shaft from slipping through.
- Check the rotor for a correct and tight fit.



- **Please consider the maximum permissible gravitational field of 12,000 x g. An excess gravitational field will result in an increased risk of glass breakage!**

Operation:

- Fill the capillary tubes with blood and seal them at one end with putty or by fusion.
- Place the capillary tubes into the recesses of the rotor with the sealed end against the rubber ring. Ensure that the capillary tubes fit tightly against the rubber ring. The opposite places must be loaded.
- Screw on the rotor cover.
- Close the centrifuge lid.
- Enter the following parameters: gravitational field RCF max. 12,000 x g, time 5 min
- Start the centrifuge.
- Open the centrifuge lid and rotor cover when the set time has elapsed.

Evaluation:

- Put the reader onto the rotor.
- Turn the reader and perform a fine adjustment with the aid of the central eccentric mechanism in order to localize the O-point and the maximum liquid point in the capillary tubes. You can now read the percentage value.
- Remove the capillary tubes. Some of the tubes can also be evaluated with the reader outside of the rotor (see the instructions for use on the back of the reader).

5.2.4 Installation of Accessories

- Only use vessels that are suitable for the rotor (see chapter 10 "Suitable Accessories", page 53 f).
- Always load the opposite compartments of the rotors with the same accessories and filling to avoid imbalance.
- Centrifugation with low capacity:
For the example, an angle rotor 24 x 2,2 ml (Fig. 5.7) is used.

The tubes must be installed symmetrically so that the rotor is loaded evenly.

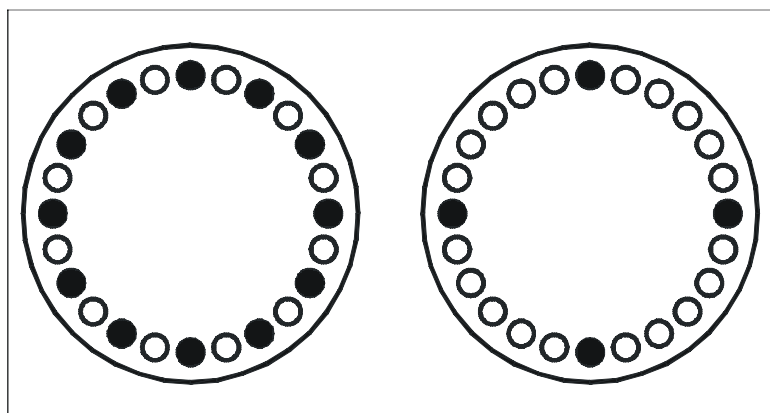


Fig. 5.6: Permitted loading of the angle rotor 24 x 2.2 ml

5.2.4.1 Tubes

- Load the tubes outside of the centrifuge. Liquids in the buckets cause corrosion.
- Fill the tubes carefully and arrange them according to their weight. Imbalances result in the excessive wear of the bearings.
- In high-speed angle rotors, the vessels must be filled up to their useful volume (= the volume stated for the vessel). If the vessels are only partially filled, they will deform. This may result in leaks at the seals that may become loose.
- When using glass tubes, the maximum value of 4,000 x g must not be exceeded (except special high-strength glass tubes; please refer to the information provided by the manufacturer).



Attention!

- **Please observe the instructions on safety and hazards in chapter 2, page 14 ff!**

5.2.5 Service Life of Rotors and Accessories

The rotors and accessories have a limited service life.

- Please perform regular checks (at least once per month) for safety reasons!
- Pay special attention to changes, such as corrosion, cracks, material abrasion etc.



- **After 10 years, they must be inspected by the manufacturer.**
- **After 50,000 cycles, the rotor must be scrapped for reasons of safety.**
- **If other data concerning the service life are engraved on the rotor or bucket, these data shall apply accordingly:** For example, a bucket with the engraving “max cycles = 10,000” has a service life of 10,000 cycles, and a rotor with the engraving “Exp.Date 02/15” must be scrapped in February 2015 at the latest (see fig. 5.7)!



Fig. 5.7: Different service life – engraving on the bucket/rotor



Attention!

- **Refer to the table of rotors and accessories with a different service life (see chapter 11 “Appendix”)!**

5.2.6 Starting the Centrifuge

The centrifuge is ready for operation when the start key is illuminated.

- Press the start key in order to start a centrifugation run.

5.2.7 Interrupting a Centrifugation Run

- Press the stop key in order to interrupt a centrifugation run.

The centrifugation run will be terminated prematurely.

5.2.7.1 Interrupting a Deceleration Process

- Press the start key during a deceleration process in order to interrupt it and to restart the centrifuge.

5.2.7.2 Softstart and Softstop Function

The softstart function is used to extend the acceleration time, whereas the softstop function is used to extend the deceleration time. The current combination is shown on the display. The stop key can be used to cyclically select various combinations:

- Press the key once to activate the softstart function.
- Press the key twice to activate the softstart function and the softstop function.
- Press the key three times to activate the softstop function alone.
- Press the key four times to activate the softstart function and the brakeless deceleration. The “soft stop” display flashes when the brakeless deceleration is active.
- Press the key five times to activate the “brakeless deceleration” function alone (the “soft stop” display flashes).
- Press the key once more to return to the standard operating mode.

5.3 Display/Program Options

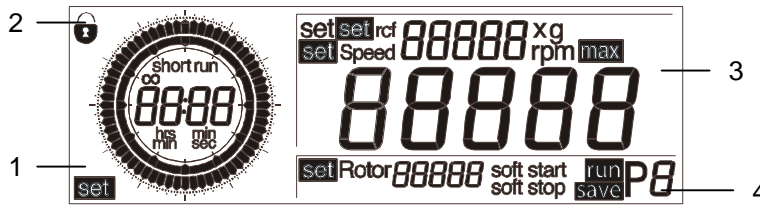


Fig. 5.8:
 Display completely active

The centrifuge display has the following display fields:

- 1 Time field
- 2 "Lock" symbol for lockdown
- 3 Speed/RCF field
- 4 Field for rotor selection, imbalance indication, run mode, and program selection

5.3.1 Time

The runtime of the centrifuge can be set at different intervals in a range from 10 seconds to 11 hours and 59 minutes.

To select the desired centrifugation time:

- Turn the left rotary knob until the "set" cursor appears in the lower left area of the display (Fig. 5.9).
- Select the option by pressing or turning the right rotary knob. The "set" cursor flashes.
- Turn the right rotary knob until the desired duration is displayed.
- Press the right rotary knob in order to confirm the input. If this is not done, the value will be automatically reset to the last setting.

After 11:59 min, the display changes from "min:sec" to "hrs:min". The time can then be changed in steps of 10 minutes.

It is also possible to change the runtime during the centrifugation run.



Attention!

If the centrifugation time is changed during the run, the centrifuge will run for the entire new time and will disregard the previous runtime that has already elapsed.

In this example (Fig 5.9) is 3:20 min.

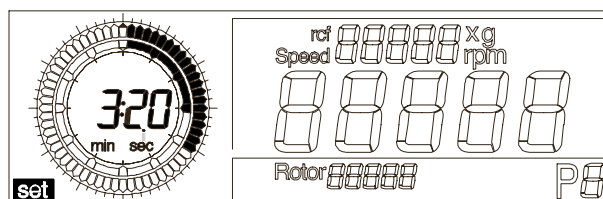


Fig. 5.9: Setting the time

5.3.1.1 Changing the Time Increments

In order to change the time in steps of 1 second (instead of in steps of 10 seconds in the min:sec mode) or in steps of 1 minute (instead of in steps of 10 minutes in the hrs:min mode):

- Keep the stop key pressed while setting the desired runtime with the right rotary knob.

5.3.1.2 Short Run

During the short run, the centrifuge accelerates at maximum power until the maximum speed is reached.

- Keep the start key pressed during the short run.

The message “short run” is displayed in the time display (Fig. 5.10) and the duration of the short run is also displayed. When the start key is released, the centrifuge decelerates at maximum power to a standstill.

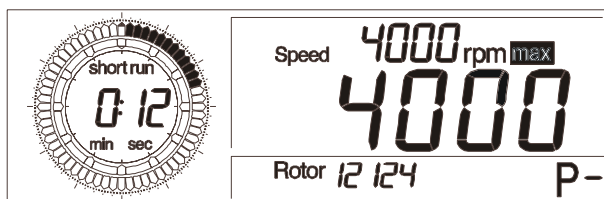


Fig. 5.10: Short run display

5.3.1.3 Continuous Run

During the continuous run, the runtime of the centrifuge is unlimited and must be stopped manually. The centrifuge accelerates during the continuous run until the set speed is reached.

To start the continuous run of the centrifuge:

- Starting with the time setting 0:10 (see 5.3.1, page 34), turn the knob anti-clockwise.
- Or:
- Starting with the time setting 11:59, turn the knob clockwise to the next setting. The message “cont” and the symbol “∞” will be displayed (Fig. 5.11).

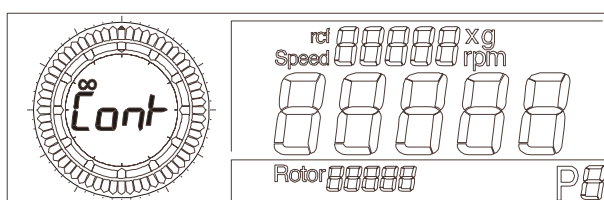


Fig. 5.11: Continuous run display

5.3.2 Speed

The desired speed of the centrifuge (revolutions per minute) can be set here (1,000 rpm in the example shown below). When the maximum permissible speed of the rotor is reached, the “max” display lights up.

To preselect a speed value:

- Turn the left rotary knob until the “set” cursor appears in front of the parameter “Speed” on the display (Fig. 5.12).
- Select the option by pressing or turning the right rotary knob. The “set” cursor will flash now.
- Turn the right rotary knob until the desired value is displayed.
- Press the right rotary knob to confirm the selected value. If this is not done, the value will be automatically reset to the last setting.

It is possible to change the speed value during the centrifugation run.

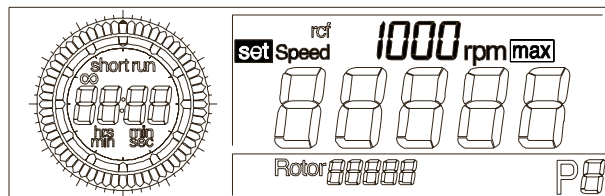


Fig. 5.12:
Setting the speed

5.3.2.1 Changing the Speed Increments

In order to change the speed in steps of 10 rpm (instead of in steps of 100 rpm):

- Keep the stop key pressed while setting the desired speed with the right rotary knob.

5.3.3 Relative Centrifugal Force (RCF)

The relative centrifugal force (RCF) is the acceleration that the sample is subject to.

The RCF value is determined by the rotor geometry and speed. The RCF and speed values, therefore, depend on each other. When the maximum permissible RCF value of the rotor is reached, the "max" display lights up.

To preselect the RCF value:

- Turn the left rotary knob until the "set" cursor appears in front of the parameter "rcf" on the display (Fig. 5.13).
- Select the option by pressing or turning the right rotary knob. The "set" cursor will now flash.
- Turn the right rotary knob until the desired value is displayed.
- Press the right rotary knob to confirm the selected value. If this is not done, the value will be automatically reset to the last setting.

It is also possible to change the RCF value during a centrifugation run.

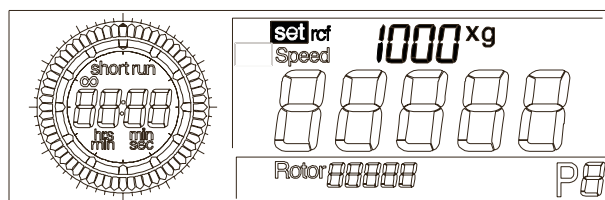


Fig. 5.13:
 Setting the relative centrifugal force

5.3.4 Rotor

The available rotors for the centrifuge can be selected here (rotor 12124 in the example). This is only possible at a standstill.

- Turn the left rotary knob until the "set" cursor appears in front of the option "Rotor" on the display (Fig. 5.14).
- Select the option by pressing or turning the right rotary knob. The "set" cursor flashes now.
- Turn the right rotary knob until the desired rotor number is displayed.
- Press the right rotary knob to confirm the input. If this is not done, the value will be automatically reset to the last setting.

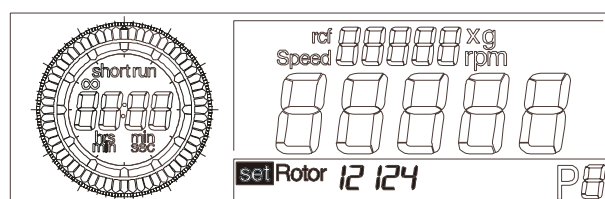


Fig. 5.14: Preselection of a rotor

5.3.5 Program

The program is used to save or load certain recurrent settings of the centrifuge. This saves time and prevents typing errors. Ten different programs (0-9) can be saved and called up. This is only possible at a standstill.

5.3.5.1 Saving the Current Settings

To save the current settings:

- Turn the left rotary knob until the “save” cursor appears on the display (Fig. 5.15).
- Select the option by pressing the right rotary knob. The “save” cursor will now flash.
- Turn the right rotary knob until the desired program number is displayed. Empty storage location numbers flash.
- Press the right rotary knob to confirm the input.

The settings are now saved under this program number (program number 8 in the example).

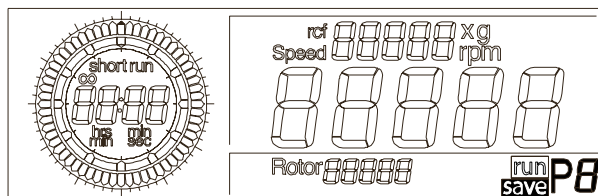


Fig. 5.15: Saving programs;
 here program number 8

5.3.5.2 Calling Up Stored Programs

If necessary, the saved programs can be called up:

- Turn the left rotary knob until the “run” cursor appears on the display (Fig 5.16).
- Select the option by pressing the right rotary cursor. The “run” cursor will now flash.
- Turn the right rotary knob until the desired program number is displayed.
- Press the right rotary knob to confirm the input.

The saved program settings will be adopted.

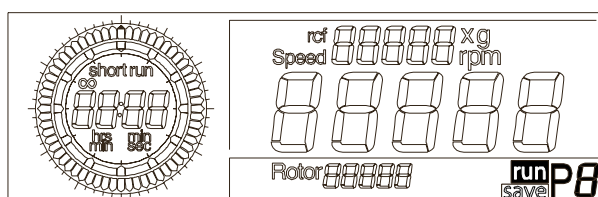


Fig. 5.16: Calling up stored programs;
 here program number 8

5.3.6 Lockdown

This function locks the parameters against all inadvertent changes.

- Turn the left rotary knob until a padlock symbol is displayed in the upper left corner of the display (Fig. 5.17).

As long as the padlock symbol is displayed, the parameters cannot be changed.

5.3.6.1 Permanent Lockdown

The parameter settings can also be locked with the help of the start key when the lid is open:

- Press the start key three times and on the third time hold it down for approx. two seconds.

After the activation of the function, the padlock symbol (Fig. 5.17) will flash. Now the centrifuge can be started and stopped, but the settings cannot be changed.

- Proceed in the same way in order to deactivate the function.

The current status remains active even if the centrifuge is switched off with the help of the mains power switch.

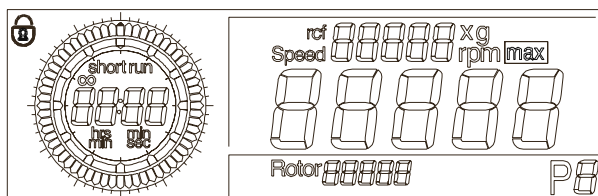


Fig. 5.17: Padlock symbol

5.3.7 Activating/Deactivating the Automatic Lid Opening Function

The Auto-Lid-Open function must be activated so that the lid opens automatically at the end of the operation:

- Press the lid key three times when the lid is open and on the third time hold it down for approx. two seconds.
- Proceed in the same way in order to deactivate the function.

After every change, the current status of the setting is displayed in the form of a message running over the display ("Auto-Lid-Open on" or "off").

5.3.8 Activating/Deactivating the Sound Signal

If this function is active, a sound signal can be heard at the end of the operation as well as in the event of an error message or imbalance.

- Press the lid key five times and on the fifth time hold it down for approx. two seconds.
- Proceed in the same way in order to deactivate the function.

After every change, the current status of the setting is displayed in the form of a message running in the display ("Buzzer on" or "off").

6 Malfunctions and Error Correction

6.1 Error Mode

Malfunctions are indicated by error messages with a number in the speed display. If the sound signal is activated, it sounds when the error message is displayed (see 5.3.8 "Activating/Deactivating the Sound Signal", page 40).

6.2 Error Correction

- Eliminate the source of the problem (see 6.2.1 to 6.2.6, page 41 ff).
- Acknowledge the error messages with the lid key.

6.2.1 No Indication on the Display

- Voltage in the socket?
- Power cord plugged in and line voltage present?
- Fuse OK?
- Mains power switch on?
- Lid closed?
- Check fuse in the mains supply.
- Plug in power cord correctly.
- Replace fuse (see fig. 5.4 "name plate", page 24).
- Switch on power.
- Close lid (see 6.2.4 "Lid cannot be opened", page 42).

6.2.2 Centrifuge cannot be started

- Start key LED not illuminated:
- Lid key LED flashes:
- Power off/on. If the error occurs again, call the service.
- Open and close the lid again. If error occurs again although both locks are locked, call the service.

6.2.3 Centrifuge decelerates during Operation

- There was a brief mains power failure (at least 2 sec), error message 61
- Centrifuge displays an error from 1 to 11 after powering on.
- Press the start key in order to restart the centrifuge.
- Power off/on (see 6.2.6 "Error Codes", page 43). If the error occurs again, call the service.

6.2.4 Lid cannot be opened

- When first trying to open the lid, the locks are not released. Lid key LED flashes.
- The lid cannot be opened, although both locks have audibly unlocked.
- Close the lid again. Press down both sides of the lid until the locks audibly lock. Open the lid again. If the error occurs again, unlock the lid manually (see 6.2.5 "Emergency lid release", page 42) and call the service.
- Check/clean the lid seal. Apply talcum powder to the seal to avoid sticking.

6.2.5 Emergency Lid Release

In the event of a power supply failure, it is possible to manually open the centrifuge lid using a stopper that is secured with a screw. It is located on the front of the bottom panel.



- Switch off the mains power switch and disconnect the power cord from the socket.
- Unscrew the screw in the stopper.
- Remove the stopper, e.g. with a screwdriver.
- Pull the visible string in order to release the lid. Then, reinsert the stopper into the opening.
- Reinsert the screw centrally.

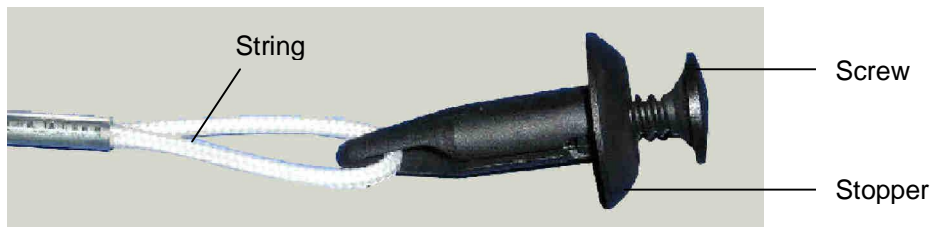


Fig. 6.1: Screw for the emergency lid release



The lid may only be unlocked and opened when the rotor is at a standstill.

If the lid is opened by way of the emergency lid release during operation, the centrifuge will be switched off immediately and decelerate brakeless.

6.2.6 Error Codes

Error no.	Kind of error	Measure	Note
1-9	System error	<ul style="list-style-type: none"> allow to slow down power off/on 	All these errors stop the centrifuge or cause it to slow down.
10-19	Speedometer error	<ul style="list-style-type: none"> allow to slow down power off/on 	
20-29	Motor error	<ul style="list-style-type: none"> power off ensure ventilation 	
30-39	EEPROM error	<ul style="list-style-type: none"> allow to slow down power off/on 	With errors 34,35,36, the centrifuge will stop. With errors 37,38, error message only.
40-45	Temperature error (only for refrigerated centrifuges)	<ul style="list-style-type: none"> allow to slow down power off allow to cool down provide better ventilation 	
46-49	Imbalance error	<ul style="list-style-type: none"> allow to slow down power off eliminate the imbalance 	
50-59	Lid error	<ul style="list-style-type: none"> press lid key close lid remove foreign matter from the opening of the lid lock device 	With error 50 and 51, the centrifuge will stop.
60-69	Process error	<ul style="list-style-type: none"> allow to slow down power off/on 	With error 60, message "power failure during run". With error 61, message "stop after power on".
70-79	Communication error	<ul style="list-style-type: none"> allow to slow down power off/on 	
80-99	Parameter error	<ul style="list-style-type: none"> power off allow to slow down provide for better ventilation 	With error 83, error message only.



Attention!

If it is impossible to eliminate the errors, please call the service!

Fig.6.2: Error Codes

6.2.7 Service Contact

In the event of queries, malfunctions, or spare part enquiries:

from Germany:

- use the **service request** form at www.sigma-zentrifugen.de → [Service Area]
- or contact

SIGMA Laborzentrifugen GmbH
An der Unteren Söse 50
37520 Osterode (Germany)
Tel. +49 (0) 55 22 / 50 07-84 25
Fax +49 (0) 55 22 / 50 07-94 25
E-mail: service@sigma-zentrifugen.de

outside Germany:

- contact our agency in your country. All agencies are listed at www.sigma-zentrifugen.de → [Contacts] → [Foreign agencies]



Attention!

- **If you would like to utilise our service, please state the type of your centrifuge and its serial number.**
- **Make use of our service request on the Internet. Please use the request form (see above) on our website.**

7 Care and Maintenance

7.1 Cleaning and Care

The centrifuge, rotor, and accessories are subject to high mechanical stress. Thorough maintenance care performed by the user extends the service life and prevents premature failure.



Attention!

If corrosion or other damage occurs due to improper care, the manufacturer cannot be held liable or subject to any warranty claims.

- Use soap water or other water-soluble, mild cleaning agents (pH value between 6 and 8).
- Avoid corrosive and aggressive substances.
- Do not use alkaline solutions or solvents.
- Do not use agents with abrasive particles.
- Do not expose the centrifuge and rotors to intensive UV radiation or thermal stress (e.g. by heat generators).

7.1.1 Centrifuge



- Disconnect the power cord from the socket before cleaning.
- Carefully remove all liquids, including water and particularly all the solvents, acids, and alkaline solutions from the centrifuge chamber using a cloth in order to avoid damage to the motor bearings.
- If the centrifuge has been contaminated with toxic, radioactive, or pathogenic substances, clean the centrifuge chamber immediately with a suitable decontamination agent (depending on the type of contamination). **Take suitable precautions for your own safety if there is a risk of toxic, radioactive, or pathogenic contamination.**



- Grease the motor shaft slightly after cleaning (grease for load-bearing bolts part no. 70284).
- Open the centrifuge when it is not in use so moisture can evaporate. This prevents the increased wear of the motor bearings.

7.1.2 Accessories



For the care of the accessories, special safety measures must be considered as these are measures that will ensure operational safety at the same time.

- Immediately rinse off the rotor, buckets, or accessories under running water if they have come into contact with any liquids that may cause corrosion. Use a brush for test tubes to clean the bores of angle rotors. Turn the rotor upside down and allow it to dry completely.
- Clean the accessories outside the centrifuge once a week or preferably after each use. Rubber cushions should be removed.
- If the rotors or accessories have been contaminated with toxic, radioactive, or pathogenic substances, clean them immediately with a suitable decontamination agent (depending on the type of contamination). **Take suitable precautions for your own safety if there is a risk of toxic, radioactive, or pathogenic contamination.**



- Dry the accessories with a soft cloth or in a drying chamber at approx. 50°C.

7.1.2.1 Plastic Accessories

- If solvents, acids, or alkaline solutions have been used, clean the plastic accessories thoroughly. The chemical resistance of plastic decreases with rising temperatures (e.g. during drying).

7.1.2.2 Aluminum Accessories

Especially aluminum parts are susceptible to corrosion.

- Acid-containing cleaning agents and alkaline cleaning agents must be avoided (see 7.1 "Cleaning and Care", page 45).
- Grease aluminum parts at least once a week with slushing oil (part no. 70104).

This essentially increases their service life and reduces susceptibility to corrosion.

7.1.3 Rotors

Chemical reactions as well as stress-corrosion (combination of oscillating pressure and chemical reaction) can affect or destroy the metals. Barely detectable cracks on the surface can expand and weaken the material without any visible signs.

- Check the material regularly (at least once a month) for
 - cracks
 - visible damage of the surface
 - pressure marks
 - signs of corrosion
 - other changes.
- Check the bores of the rotors.
- Replace any damaged components immediately for your own safety.
- Protect the rotors, lid seals, and rubber cushions (if included) at least once per week with the supplied slushing oil (part no. 70104).
- Grease the rotor tie-down screw (grease for load-bearing bolts part no. 70284).

7.1.3.1 Microhematocrite Rotor

- Remove the microhematocrite rotor for cleaning.
- Wipe the centrifuge chamber clean.
- Replace the rubber ring in the event of wear or glass breakage (part no. 16003 for rotor 11024).

7.1.4 Glass Breakage

- Glass particles will damage the surface coating (e.g. Eloxal) of the buckets, which will then lead to corrosion.
- Glass particles in the rubber cushions of the buckets will cause glass breakage again.
- Glass particles in the centrifuge chamber will cause metal abrasion due to the strong air circulation. This metal dust will not only pollute the centrifuge chamber, rotor, and materials to be centrifuged but also damage the surfaces of the accessories, rotors, and centrifuge chamber.



In the case of glass breakage, immediately remove all glass particles (e.g. with a vacuum cleaner). Replace the rubber cushions since even thorough cleaning will not remove all glass particles.

In order to completely remove the glass particles and the metal dust from the rotor chamber:

- Grease the upper third of the centrifuge chamber with e.g. Vaseline.
- Then, let the rotor rotate for a few minutes at a moderate speed (approx.. 2,000 rpm). The glass and metal particles will now collect at the greased part and can easily be removed with a cloth together with the grease.
- Remove the grease with glass and metal particles with a cloth.
- If necessary, repeat this procedure.

7.2 Sterilization and Disinfection of the Rotor Chamber and Accessories

- Use commercially-available disinfectants such as, for example, Sagrotan[®], Buraton[®], or Terralin[®] (available at chemist's shops or drugstores).
- The centrifuges and the accessories consist of various materials. A possible incompatibility must be considered.
- Before using cleaning or decontamination agents that were not recommended by us, contact the manufacturer to ensure that such a procedure will not damage the centrifuge.
- For autoclaving, consider the continuous heat resistance of the individual materials (see 7.2.1 "Autoclaving", page 49). Please contact us if you have any queries (see 6.2.7 "Service Contact", page 44).



If dangerous materials (e.g. infectious and pathogenic substances) are used, the centrifuge and accessories must be disinfected.

7.2.1 Autoclaving

The service life of the accessories essentially depends on the frequency of autoclaving and use.

- Replace the accessories immediately when the parts show changes in color or structure or in the occurrence of leaks etc.
- During autoclaving, the caps of the tubes must not be screwed on in order to avoid the deformation of the tubes.
- Replace the rotor 12124 after autoclaving 20 times or 5 years.

It cannot be excluded that plastic parts, e.g. lids, may deform during autoclaving.

Autoclaving:

Accessories	max. temp. °C	min. time min	max. time min	max. cycles
Glass tubes	134-138	3	40	-
Polycarbonate tubes	115-118	30	40	20
Polypropylene tubes	115-118	30	40	30
Teflon tubes	134-138	3	5	100
Aluminum rotors	134-138	3	5	-
Polypropylene rotor 12124	115-118	30	40	20
Polycarbonate/Polyallomer lids for angle rotors	115-118	30	40	20
Polysulfone lids for angle rotors	134-138	3	5	100
Aluminum buckets	134-138	3	5	-
Polycarbonate caps for buckets	115-118	30	40	50
Polypropylene caps for buckets	115-118	30	40	50
Polysulfone caps for buckets	134-138	3	5	100
Rubber adapters	115-118	30	40	-
Rubber cushions	115-118	30	40	-
Round carriers made of polypropylene	115-118	30	40	-
ditto, made of polyallomer and polycarbonate	115-118	30	40	-
Rectangular carriers made of polypropylene	115-118	30	40	-
ditto, made of polyallomer and polycarbonate	115-118	30	40	-

Fig. 7.1: Autoclaving table

7.3 Service



Attention!

In the event of service work that requires the removal of the panels, there is a risk of electric shock or mechanical injury. Only qualified specialist personnel is authorised to perform this service work.

The centrifuge is subject to high mechanical stress. In order to be able to withstand this high level of stress, high-quality components were used during the production of the centrifuge. Nevertheless, wear cannot be excluded and it may not be visible from the outside. Especially the rubber parts that are – among other things – part of the motor suspension, are subject to ageing.

This is why we recommend having the centrifuge checked by the manufacturer during an inspection once per year in the operating state and once every three years in the dismantled state. Rubber parts should be replaced after three years or a maximum of 15,000 cycles.

Information and appointments:

in Germany:

- use the **service request** form at www.sigma-zentrifugen.de → [Service Area]
- or contact

SIGMA Laborzentrifugen GmbH
An der Unteren Söse 50
37520 Osterode (Germany)
Tel. +49 (0) 55 22 / 50 07-84 25
Fax +49 (0) 55 22 / 50 07-94 25
E-mail: service@sigma-zentrifugen.de

outside Germany:

- contact our agency in your country. All agencies are listed at www.sigma-zentrifugen.de → [Contacts] → [Foreign agencies]



Attention!

- **If you would like to utilise our service, please state the type of your centrifuge and its serial number.**
- **Make use of our online service request on the Internet. Please use the request form (see above) on our website.**

7.4 Return of defective parts

Although we exercise great care during the production of our products, it may be necessary to return a unit or accessory to the manufacturer.

In order to ensure the quick and economical processing of returns of centrifuges, spare parts, or accessories, we require complete and extensive information concerning the process. Please fill in the following forms completely, sign them, and enclose them with the return package:

1. Declaration of decontamination

As a certified company and due to the legal regulations for the protection of our employees and of the environment, we are obliged to certify the harmlessness of all incoming goods. For this purpose, we require a declaration of decontamination.

- The form must be filled in completely and signed by authorised and specialised personnel only.
- Affix the original form in a clearly visible manner to the outside of the packaging.



Attention!

If no such declaration is enclosed in the return package, we will perform the decontamination at your expense!

2. Form for the return of defective parts

This form is for the product-related data. They facilitate the assignment, and they enable the quick processing of the return. If several parts are returned together in one packaging, please enclose a separate problem description for every defective part.

- A detailed problem description is necessary in order to perform the repair quickly and economically.



Attention!

If the form does not include a description of the malfunction, neither a refund nor a credit note can be issued. In this case, we reserve the right to dispose of the parts or to return them to you both at your expense.

- Please note on the form if you would like to receive a cost estimate. Cost estimates are only prepared upon request and against charge. If an order is placed, these charges will be offset.



Attention!

The unit must be packaged in a transport-safe manner. Please use the original packaging, if at all possible.

If the product is dispatched to us in unsuitable packaging, you will be charged the cost for returning it to you in new packaging.

The forms can be downloaded online from
www.sigma-zentrifugen.de → [Service Area].

8 Disposal

8.1 Disposal of the Centrifuge



In accordance with the directive 2002/96/EC, SIGMA centrifuges are marked with the symbol shown to the left. This symbol means that it is not permissible to dispose of the unit among household trash.

- You can return these centrifuges free of cost to SIGMA Laborzentrifugen GmbH.
- Please ensure that the unit is decontaminated.
- Please fill in the enclosed declaration of decontamination.
- Please comply with any other applicable local rules and regulations.

8.2 Disposal of the Packaging

- Use the packaging to return the centrifuge for disposal.
- Or:
- Dispose of the packaging, after having separated the individual materials.
 - Please comply with all local rules and regulations.

9 Warranty and Liability

The warranty and liability are subject to our "General Conditions" that were distributed to the operator upon the conclusion of the contract.

Warranty and liability claims are excluded if they are due to:

- Improper use
- Non-compliance with the safety instructions and hazard warnings in the operating manual
- Force majeure

10 Suitable Accessories

Part no.	Description	Max. speed (rpm)	Max. gravitational field (x g)
12124	Angle rotor made of polypropylene 24 x 1.5/2.0 ml, for e.g. reaction vials no. 15008, 15040, incl. polysulfone lid no. 17857, max. radius 8.2 cm, min. radius 5 cm, angle 45°	14 000	17 968
12126	Angle rotor made of polypropylene 36 x 0.5/0.75 ml, e.g. no. 15005 incl. polysulfone lid no. 17887, max. radius 7.3 cm, min. radius 4.6 cm, angle 45°	14 000	15 996
12101	Angle rotor made of polypropylene, for 4 PCR-strips with 8 tubes 0.2 ml e.g. no. 15042, incl. polysulfone lid no. 17865, max. radius 6.6 cm, min. radius 5.4 cm, angle 45°	14 000	14 462

Adaptors and Plastic Vessels

Part no.	Description
13021	Adapter for PCR-tube 0.2 ml, Ø 5.85/6.95 x 20/23.4 mm, suitable for 11124, 12024, 12124, 12132
13000	Adapter for reaction vials 0.25-0.4 ml 15014, suitable for 11124, 12024, 12124, 12132
13002	Adapter for reaction vials 0.5-0.75 ml 15005, Ø 7.9/10 x 28/31 mm, suitable for 11124, 12024, 12124, 12132
15042	PCR-tube 0.2 ml, Ø 5.85/6.95 x 20/23.4 mm, 1 pack contains 100 pcs., suitable for 13021
15014	Reaction vials 0.4 ml (Beckman system), polypropylene, 1 pack contains 100 pcs., suitable for 12031, 13000
15005	Reaction vials 0.5 ml, Ø 7.9/10 x 28/31 mm, 1 pack contains 100 pcs., suitable for 13002
15008	Reaction vials 1.5 ml, 1 pack contains 100 pcs., suitable for 11124, 12024, 12124, 12132
15040	Reaction vials 2.2 ml, 1 pack contains 100 pcs., suitable for 11124, 12024, 12124, 12132

Accessories for microhematocrite capillary tubes

Part no.	Description	Max. speed (rpm)	Max. gravitational field (x g)
11024	Microhematocritrotor incl. lid, suitable for 24 capillary tubes Ø 1.5 x 75 mm, 50 µl no. 15001, incl. reader no. 17029, usable with reader no. 17024, max. radius 8.6 cm, min. radius 1.1 cm	12 000	13 845
17874	Lid for microhematocritrotor 11024		
16003	Rubber ring for microhematocrite rotor		
15001	Microhematocrite capillary tubes, heparinized, Ø 1.5 x 75 mm, 50 µl, 200 pcs. per pack		
17005	Capillary tube sealing putty (10 plates)		
17024	Reader for use with microhematocritrotor		
17029	Card reader for 1 capillary tube		
17004	Magnifying glass		

Further accessories available upon request.

10.1 Maximum speed for tubes

Some tubes, such as centrifuge glass tubes, microtubes, culture tubes, fluoropolymer tubes and especially high-volume tubes can be used in our rotors, buckets, and adapters at higher speeds than their breaking limit.

- Always fill the tubes up to their useful volume (= the volume that is stated for the tube).
- Follow the manufacturer's recommendations.

10.2 Graphical Representation of the Rotors

The graphical representation of the rotors shows the maximum and minimum radii of the accessories used. If necessary, the values must be manually calculated (see 11.1.1 "RCF", page 55).

Fig. 10.1: Minimum and maximum radius of an angle rotor


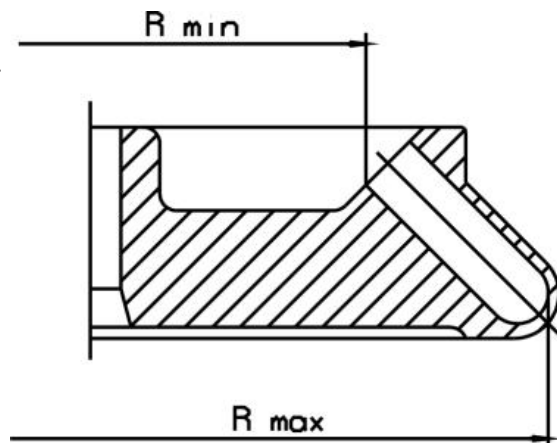


Fig. 10.2: Representation of a microhematocrite rotor

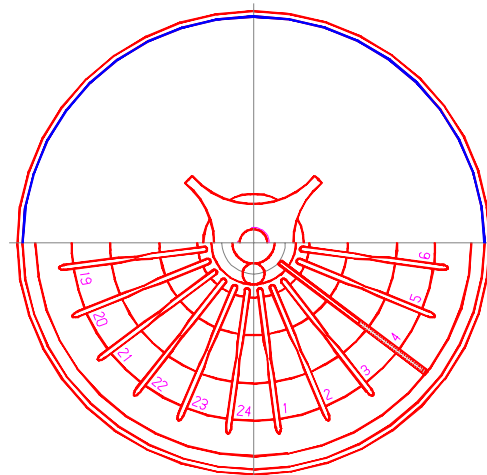

11 Appendix

11.1 Formulae – Mathematical Relations

11.1.1 Relative Centrifugal Force (RCF)

The parameters speed, RCF, and the group rotor and radius cannot be specified independently. They are interrelated via the following formula:

$$\text{RCF} = 11.18 \times 10^{-6} \times r \times n^2$$

If two values are given, the third value is determined by the equation. If then the speed or the rotation radius is changed, the resulting RCF will be recalculated. If the RCF is altered, the speed will be adapted accordingly under the consideration of the radius.

r = radius in cm
n = speed in rpm
RCF without dimension

11.1.2 Density

If the density of the liquid is higher than 1.2 g/cm³, the maximum permissible speed of the centrifuge is calculated according to the following formula:

$$n = n_{\text{max}} \times \sqrt{(1.2 / \text{Rho})}$$

Rho = density in g/cm³

11.1.3 Speed-Gravitational-Field-Diagram

Additional help can be found in the enclosed speed-gravitational-field-diagram (see next page).

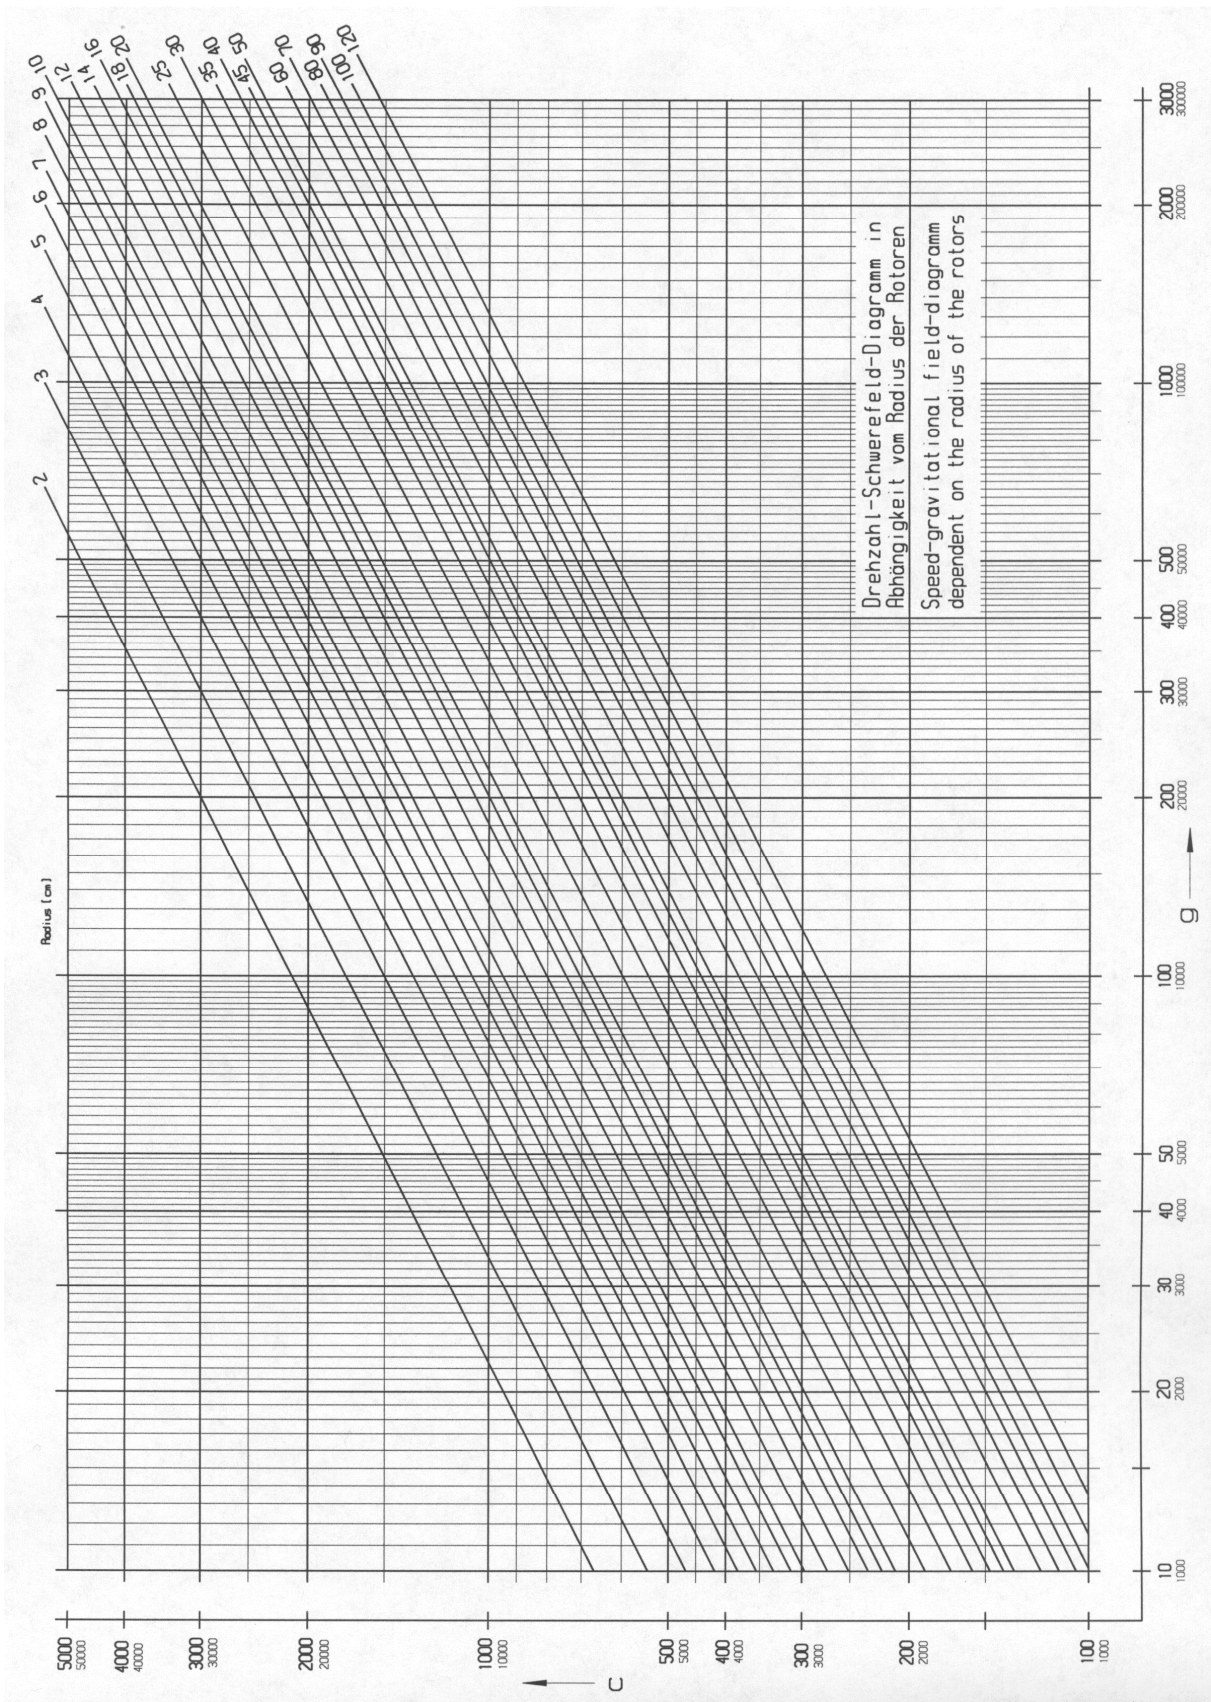


Fig. 11.1: Speed-gravitational-field-diagram

11.2 Table of rotors and accessories with a different service life



Rotors and accessories with a different service life

If other no data concerning the service life are engraved on the rotor or accessory, rotors and buckets must be checked by the manufacturer after 10,000 cycles. After 50,000 cycles, rotors must be scrapped for safety reasons.

Rotor / bucket	Cycles	Service life ("Exp.Date")	Autoclaving	Suitable for centrifuge	Remarks
11026		7 years		1-14, 1-14K	
12082		7 years		1-14, 1-14K	
12083		7 years		1-14, 1-14K	
12084		7 years		1-14, 1-14K	
12085		7 years		1-14, 1-14K	
12092		5 years	20x	1-14, 1-14K	
12093		5 years	20x	1-14, 1-14K	
12094		5 years	20x	1-14, 1-14K	
12096		5 years	20x	1-14, 1-14K	
12101		5 years	20x	1-15, 1-15K, 1-15P, 1-15PK	
12124		5 years	20x	1-15, 1-15K, 1-15P, 1-15PK	
12126		5 years	20x	1-15, 1-15K, 1-15P, 1-15PK	
9100	15,000			4-15C, 4K15C, 4-16, 4-16K, 6-15, 6K15, 6-16, 6-16K	without engraving, only "spincontrol professional"
12500		7 years		6-15, 6K15, 6-16, 6-16K	
13218	20,000			4-16, 4-16K, 6-16, 6-16K	
13845	20,000			8K	
13850	10,000			8K	
13860	35,000			8K	
13864	1,000			8K	without engraving
13865	1,000			8K	without engraving

11.3 Resistance Data

Resistant at +20 °C

		Concentration	High Density	Polyamide	Polycarbonate	Polyoxymethylene	Polypropylene	Polysulfone	Polyvinyl chloride, hard	Polyvinyl chloride, weak	Polytetrafluorethylene	Aluminum
			Polyethylene	PA	PC	POM	PP	PSU	PVC	PVC	PTFE	AL
Medium	Formula	[%]	HDPE	PA	PC	POM	PP	PSU	PVC	PVC	PTFE	AL
- no data												
1 resistant												
2 practically resistant												
3 partially resistant												
4 not resistant												
Acetaldehyde	C ₂ H ₄ O	40	3	2	4	2	3	4	4	-	1	1
Acetamide	C ₂ H ₅ NO	saturated	1	1	4	1	1	4	4	-	1	1
Acetone	C ₃ H ₆ O	100	1	1	4	1	1	4	4	-	1	1
Acrylonitrile	C ₃ H ₃ N	100	1	1	4	3	3	4	4	4	1	1
Allyl alcohol	C ₃ H ₆ O	96	1	3	3	2	2	2	2	4	1	1
Aluminum chloride	AlCl ₃	saturated	1	3	2	4	1	-	1	-	1	4
Aluminum sulfate	Al ₂ (SO ₄) ₃	10	1	1	1	3	1	1	1	1	1	1
Ammonium chloride	(NH ₄)Cl	aqueous	1	1	1	2	1	1	1	1	1	3
Ammonium hydroxide	NH ₃ + H ₂ O	30	1	3	4	1	1	2	1	-	1	1
Aniline	C ₆ H ₇ N	100	1	3	4	1	2	4	4	4	1	1
Anisole	C ₇ H ₈ O	100	3	4	4	1	4	4	2	-	1	1
Antimony trichloride	SbCl ₃	90	1	4	1	4	1	-	1	-	1	4
Benzaldehyde	C ₇ H ₆ O	100	1	3	4	1	1	3	4	4	1	1
Benzene	C ₆ H ₆	100	3	2	4	1	3	4	4	-	1	1
Boric acid	H ₃ BO ₃	aqueous	1	3	1	2	1	-	-	-	1	1
Butyl acrylate	C ₇ H ₁₂ O ₂	100	1	2	4	2	3	4	4	4	1	1
Butyl alcohol, normal	C ₄ H ₁₀ O	100	1	1	2	1	1	2	2	4	1	1
Calcium chloride	CaCl ₂	alcoholic	1	4	2	3	1	-	-	4	1	3
Carbon disulfide	CS ₂	100	4	3	4	2	4	4	4	4	1	1
Carbon tetrachloride (TETRA)	CCl ₄	100	4	4	4	2	4	4	4	4	1	1
Chlorine	Cl ₂	100	4	4	4	4	4	4	4	4	1	3
Chlorine water	Cl ₂ x H ₂ O		3	4	4	4	3	-	3	3	1	4
Chlorobenzene	C ₆ H ₅ Cl	100	3	4	4	1	3	4	4	4	1	1
Chloroform	CHCl ₃	100	3	3	4	4	3	4	4	4	1	3
Chromic acid	CrO ₃	10	1	4	2	4	1	4	1	-	1	1
Chromic potassium sulfate	KCr(SO ₄) ₂ x 12H ₂ O	saturated	1	2	1	3	1	-	1	-	1	3
Citric acid	C ₆ H ₈ O ₇	10	1	1	1	2	1	1	1	1	1	1
Citric acid	C ₆ H ₈ O ₇	50	1	3	1	2	1	-	-	-	1	1
Copper sulfate	CuSO ₄ x 5H ₂ O	10	1	1	1	1	1	1	1	1	1	4
Cyclohexanol	C ₆ H ₁₂ O	100	1	1	3	1	1	1	1	4	1	1
Decane	C ₁₀ H ₂₂	100	-	1	2	1	3	-	-	-	1	1
Diaminoethane	C ₂ H ₈ N ₂	100	1	1	3	1	1	-	3	4	1	1
Diesel fuel	-	100	1	1	3	1	1	-	1	3	1	1
Dimethyl formamide (DMF)	C ₃ D ₇ NO	100	1	1	4	1	1	4	3	-	1	1
Dimethyl sulfoxide (DMSO)	C ₂ H ₆ SO	100	1	2	4	1	1	4	4	-	1	1
Dimethylaniline	C ₈ H ₁₁ N	100	-	3	4	2	4	-	-	-	1	1
Dioxane	C ₄ H ₈ O ₂	100	2	1	4	1	3	2	3	4	1	1

Resistant at +20 °C

			Concentration	High Density Polyethylene	Polyamide	Polycarbonate	Polyoxymethylene	Polypropylene	Polysulfone	Polyvinyl chloride, hard	Polyvinyl chloride, weak	Polytetrafluorethylene	Aluminum
Medium	Formula	[%]	HDPE	PA	PC	POM	PP	PSU	PVC	PVC	PTFE	AL	
- no data													
1 resistant													
2 practically resistant													
3 partially resistant													
4 not resistant													
Dipropylene glycol (mono)methyl ether	C ₄ H ₁₀ O	100	3	1	4	1	4	4	4	4	1	1	
Ethyl acetate	C ₄ H ₈ O ₂	100	1	1	4	1	1	4	4	4	1	1	
Ethylene chloride	C ₂ H ₄ Cl ₂	100	3	3	4	1	3	4	4	4	1	1	
Ferrous chloride	FeCl ₂	saturated	1	3	1	3	1	1	1	1	1	4	
Formaldehyde solution	CH ₂ O	30	1	3	1	1	1	-	-	-	1	1	
Formic acid	CH ₂ O ₂	100	1	4	3	4	1	3	3	1	1	1	
Furfural	C ₅ H ₄ O ₂	100	1	3	3	2	4	-	-	-	1	1	
Gasoline	C ₅ H ₁₂ - C ₁₂ H ₂₆	100	2	1	3	1	3	3	2	-	1	1	
Glycerol	C ₃ H ₈ O ₃	100	1	1	3	1	1	1	1	2	1	1	
Heptane, normal	C ₇ H ₁₆	100	2	1	1	1	2	1	2	4	1	1	
Hexane, n-	C ₆ H ₁₄	100	2	1	2	1	2	1	2	4	1	1	
Hydrogen chloride	HCl	5	1	4	1	4	1	1	1	-	1	4	
Hydrogen chloride	HCl	concentrated	1	4	4	4	1	1	2	3	1	4	
Hydrogen peroxide	H ₂ O ₂	3	1	3	1	1	1	1	1	-	1	3	
Hydrogen peroxide	H ₂ O ₂	30	1	4	1	4	1	1	1	-	1	3	
Hydrogen sulfide	H ₂ S	10	1	1	1	1	1	1	1	3	1	1	
Iodine, tincture of	I ₂		1	4	3	1	1	-	4	4	1	1	
Isopropyl alcohol	C ₃ H ₈ O	100	1	1	1	1	1	1	1	4	1	2	
Lactic acid	C ₃ H ₆ O ₃	3	1	3	1	2	1	1	2	-	1	1	
Magnesium chloride	MgCl ₂	10	1	1	1	1	1	1	1	1	1	1	
Mercuric chloride	HgCl ₂	10	1	4	1	3	1	1	1	1	1	4	
Mercury	Hg	100	1	1	1	1	1	1	1	3	1	3	
Methyl acetate	C ₃ H ₆ O ₂	100	1	1	4	2	1	-	4	4	1	1	
Methyl alcohol	CH ₄ O	100	1	2	4	1	1	3	1	3	1	1	
Methyl benzene	C ₇ H ₈	100	3	1	4	1	3	4	4	4	1	1	
Methyl ethyl ketone (MEK)	C ₄ H ₈ O	100	1	1	4	1	1	4	4	4	1	1	
Methylene chloride	CH ₂ Cl ₂	100	4	3	4	3	3	4	4	4	1	1	
Mineral oil	—	100	1	1	1	1	1	1	1	-	1	1	
Nitric acid	HNO ₃	10	1	4	1	4	1	1	1	-	1	3	
Nitric acid	HNO ₃	100	4	4	4	4	4	-	4	-	1	1	
Nitrobenzene	C ₆ H ₅ NO ₂	100	3	4	4	3	2	4	4	4	1	1	
Oleic acid	C ₁₈ H ₃₄ O ₂	100	1	1	1	2	1	-	1	-	1	1	
Oxalic acid	C ₂ H ₂ O ₄ x 2H ₂ O	100	1	3	1	4	1	1	1	1	1	1	
Ozone	O ₃	100	3	4	1	4	3	1	1	-	1	2	
Petroleum	—	100	1	1	3	1	1	1	1	3	1	1	
Phenol	C ₆ H ₆ O	10	1	4	4	4	1	4	1	3	1	1	
Phenol	C ₆ H ₆ O	100	2	4	4	4	1	3	4	3	1	1	
Phosphoric acid	H ₃ PO ₄	20	1	4	2	4	1	-	-	-	1	4	
Phosphorus pentachloride	PCl ₅	100	-	4	4	4	1	-	4	4	1	1	
Potassium hydrogen carbonate	CHKO ₃	saturated	1	1	2	1	1	-	-	-	1	4	
Potassium hydroxide	KOH	30	1	1	4	3	1	1	1	1	1	4	

Resistant at +20 °C

			Concentration	High Density Polyethylene	Polyamide	Polycarbonate	Polyoxymethylene	Polypropylene	Polysulfone	Polyvinyl chloride, hard	Polyvinyl chloride, weak	Polytetrafluorethylene	Aluminum
Medium	Formula	[%]	HDPE	PA	PC	POM	PP	PSU	PVC	PVC	PTFE	AL	
- no data													
1 resistant													
2 practically resistant													
3 partially resistant													
4 not resistant													
Potassium hydroxide	KOH	50	1	1	4	3	1	1	1	1	1	4	
Potassium nitrate	KNO ₃	10	1	1	1	1	1	-	-	-	1	1	
Potassium permanganate	KMnO ₄	100	1	4	1	1	1	-	1	-	1	1	
Pyridine	C ₅ H ₅ N	100	1	1	4	1	3	4	4	4	1	1	
Resorcinol	C ₆ H ₆ O ₂	5	1	4	2	3	1	4	2	-	1	2	
Silver nitrate	AgNO ₃	100	1	1	1	1	1	1	1	1	1	4	
Sodium bisulfite	NaHSO ₃	10	1	1	2	4	1	-	-	-	1	1	
Sodium carbonate	Na ₂ CO ₃	10	1	1	1	1	1	-	-	-	1	3	
Sodium chloride	NaCl	30	1	1	1	1	1	1	1	1	1	3	
Sodium hydroxide	NaOH	30	1	1	4	1	1	1	1	1	1	4	
Sodium hydroxide	NaOH	50	1	1	4	1	1	1	1	-	1	4	
Sodium sulfate	Na ₂ SO ₄	10	1	1	1	1	1	1	1	1	1	1	
Spirits	C ₂ H ₆ O	96	1	1	1	1	1	1	1	3	1	1	
Styrene	C ₈ H ₈	100	4	1	4	1	3	-	4	4	1	1	
Sulfuric acid	H ₂ SO ₄	6	1	4	1	4	1	1	1	-	1	3	
Sulfuric acid	H ₂ SO ₄	fuming	4	4	4	4	4	4	4	4	1	3	
Tallow	—	100	1	1	1	1	1	-	1	1	1	1	
Tetrahydrofuran (THF)	C ₄ H ₈ O	100	3	1	4	1	3	4	4	4	1	1	
Tetrahydronaphthalene	C ₁₀ H ₁₂	100	3	1	4	1	4	4	4	4	1	1	
Thionyl chloride	Cl ₂ SO	100	4	4	4	2	4	4	4	4	1	3	
Transformer oil	—	100	1	1	3	3	1	1	1	-	1	1	
Trichloroethane	C ₂ H ₃ Cl ₃	100	3	3	4	2	4	4	4	4	1	4	
Urea	CH ₄ N ₂ O	10	1	1	1	1	1	-	-	-	1	1	
Urine	—	100	1	1	1	1	1	-	1	1	1	2	
Vinegar	C ₂ H ₄ O ₂	10	1	4	1	1	1	1	1	1	1	1	
Vinegar	C ₂ H ₄ O ₂	90	1	4	4	4	1	3	1	4	1	1	
Wax	—	100	-	1	1		1	-	-	-	1	1	
Wines	—	100	1	1	1	2	1	1	1	1	1	4	
Xylene	C ₈ H ₁₀	100	3	1	4	1	4	4	4	4	1	1	
Zinc chloride	SnCl ₂	10	1	4	2	2	1	-	-	-	1	4	

12 Index

Acceleration curves	
- see also the softstart and softstop function	25
Acceleration time	
- see also the softstart and softstop function	33
Acid	58, 59, 60
Adapter	49, 54
Alkaline solutions.....	17, 45, 46
Ambient temperature	12
Angle rotor.....	31, 49
Auto-Lid-Open function.....	39
Bucket	16, 18, 49
Capillary tubes.....	30
Centrifugation with low Capacity.....	31
Centrifuges	
- definition	11
Chemical reactions.....	47
Cleaning agents	45, 46
Closing the lid.....	18, 27
Condensation	22
Connected load	12
Connecting cable.....	13
Contamination	18, 45, 46
Continuous heat resistance	48
Continuous run.....	25, 35
Corrosion.....	16, 19, 31, 32, 45, 46, 48
Cost estimate	51
Cracks	19, 32, 47
Current consumption	12
Damage of the surface	47
Dangerous goods.....	17
Deceleration curves	
- see also the softstart and softstop function	25
Deceleration time	
- see also the softstart and softstop function	33
Declaration of decontamination	51
Density	16, 55, 58
Different service life of rotors and accessories.....	32, 57
Disinfectants.....	48
Electrical connection.....	12
EMC as per EN 61326.....	12
Equipotential bonding screw.....	26
Error messages.....	26, 41
Errors	26, 43
Fire-fighting measures.....	19
Form for the return of defective parts.....	51
Fuse	13, 22, 41
General Conditions.....	52
Glass particles.....	48
Gravitational field.....	12, 16, 30, 55
Ground wire check	26

Ground wire connector	22
Hazard warnings	14, 17, 29, 52
Hazards	11, 18, 19
Imbalance	17, 31, 43
Infectious substances	16, 18, 48
Inflammable substances	18
Inspection by the manufacturer	50
IP-Code	12
Mains power switch	27, 39, 41, 42
Malfunction	16, 41
Maximum speed for glass tubes	31
Maximum speed for tubes	54
Measures for the containment of harmful emissions	19
Microhematocrite rotor	16, 30
Motor shaft	19, 28, 29, 30, 45
Noise level	12
Online download of forms	51
Opening the lid	27
Operating voltage	22
Operational safety	18, 46
Overseas shipping	20
Padlock symbol	39
Parameter	25, 55
Parameter error	43
Pathogenic substances	18, 45, 46, 48
Performance data	12
Power consumption	12
Power cord	22, 41, 42, 45
Pressure marks	47
Prevention of accidents	11, 15
Problem description	51
Program	25, 38
Program number	38
Protection class	12
Radioactive substances	16, 45, 46
Radioactive substances	18
Radius	54, 55
Relative centrifugal force	25, 37, 55
Return of centrifuges, spare parts, or accessories	51
Rotor geometry	37
Rotor number	37
Rotor tie-down screw	28, 30, 47
Rotor wrench	13, 28, 29, 30
Rotors and accessories with a different service life	32, 57
Rubber cushions	46, 47, 48, 49
Rubber parts	19, 50
Safety class	22
Safety distance	17, 22
Safety instructions	11, 14, 16
Safety instructions and hazard warnings	29
Serial number	44, 50
Service life of rotors and accessories	32, 57
Service request	3, 44, 50

Service work.....	50
Short run	25, 35
Signs of corrosion.....	18, 47
Slushing oil.....	13, 46, 47
Solvents	17, 45, 46
Sound signal	40, 41
Spare fuse.....	13
Specialist personnel	50
Storage temperature.....	12, 20
Stress-corrosion	47
Structural changes	19
Supply voltage.....	22
Table of rotors and accessories with a different service life	32, 57
Toxic substances.....	16, 18, 45, 46
Transport safety device	21
Type of the centrifuge.....	44, 50
UV radiation	22, 45
Ventilation	22, 43
Wear	50